

May 19, 2016

Installation Instructions for ADOT_V8i.zip (generic workspace for users without groups)

(Note: Microstation V8i needs to be installed and functioning)

- 1) Download ADOT_V8i.zip and extract to C:\ (or other drive letter)

Note: If you need to use resources from a Group, like Roadway or Traffic, you need to download their zip file, and create the users folder there.

Do not create the users folder under the standards folder if you are working for a specific group.

- 2) Under the ADOT_V8i\standards folder, create a "Users" sub-folder
(ex. C:\ADOT_V8i\standards\Users\)
- 3) Create a username sub-folder under the Users folder you created in step 2.
Use your User name login (ex. C:\ADOT_V8i\standards\Users\A1428\)
- 4) Copy the ADOT_STD.ucf file from the C:\ADOT_V8i\standards\Dev_V8i\config\ folder and paste in the C:\ProgramData\Bentley\MicroStation V8i (SELECTseries)\WorkSpace\Users\ folder.
- 5) Open the ADOT_STD.ucf file you copied in step 4, and make sure the path for ADOT_ROOT= is set to the appropriate drive letter (i.e. ADOT_ROOT=C:\ADOT_V8i/ or other drive letter)
- 6) Start MicroStation.
Select ADOT under User: (right side near the bottom of the Open file dialog box).