

June 10, 2014

Installation Instructions for Utilities_V8i.zip (Utilities workspace)

(Note: Microstation V8i needs to be installed and functioning)

- 1) Download ADOT_V8i.zip first and extract to C:\ (or other drive letter) from <http://www.azdot.gov/business/engineering-and-construction/CADD>
- 2) Download Utilities_V8i.zip and extract to C:\ (or other drive letter) <http://www.azdot.gov/business/engineering-and-construction/CADD>
- 3) Copy the utilities.ucf file from the C:\ADOT_V8i\Utilities\Dev_V8i\config\ folder and paste in the C:\ProgramData\Bentley\MicroStation V8i (SELECTseries)\WorkSpace\Users\ folder.
- 4) Open the utilities.ucf file you copied in step 3, and make sure the path for ADOT_ROOT= is set to the appropriate drive letter (i.e. ADOT_ROOT=C:\ADOT_V8i/ or other drive letter)
- 5) Start MicroStation.
Select utilities under User: (right side near the bottom of the Open file dialog box).